




Mount-n-Lock® GennyGo® F3KS2448 Assembly Guide
 Tray Kits Fit 4.0, 4.5, 5.3, 6.0 Inch & Other Size RV Bumpers
 Visit www.mount-n-lock.com/installs for full-size instructions and videos.




1

Assemble Tray Pans

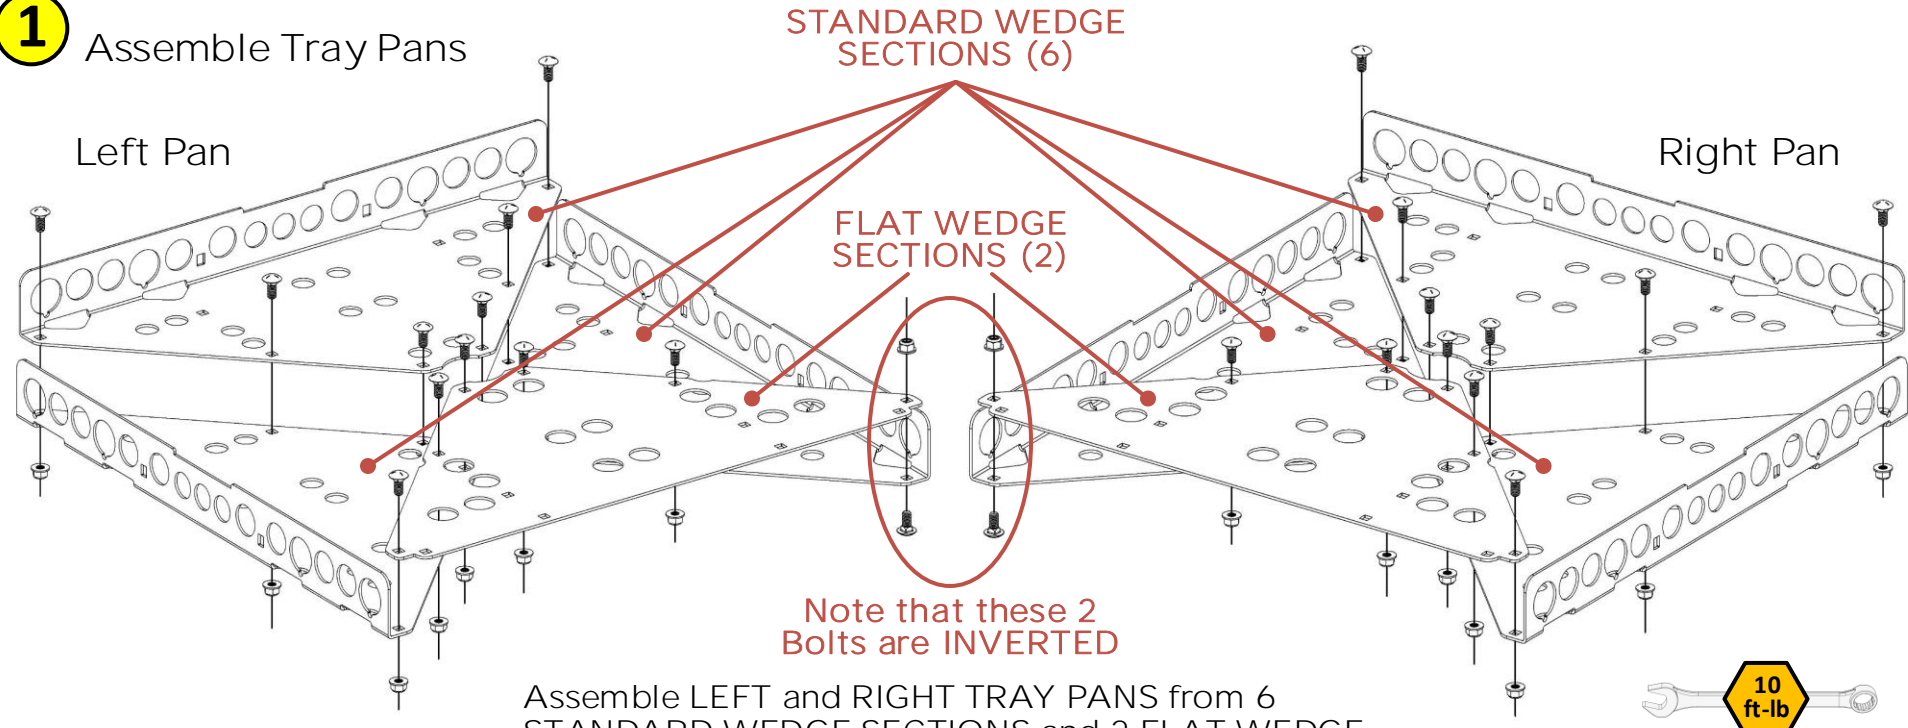

Assemble LEFT and RIGHT TRAY PANS from 6 STANDARD WEDGE SECTIONS and 2 FLAT WEDGE SECTIONS using 24 Nuts & Bolts as Shown.

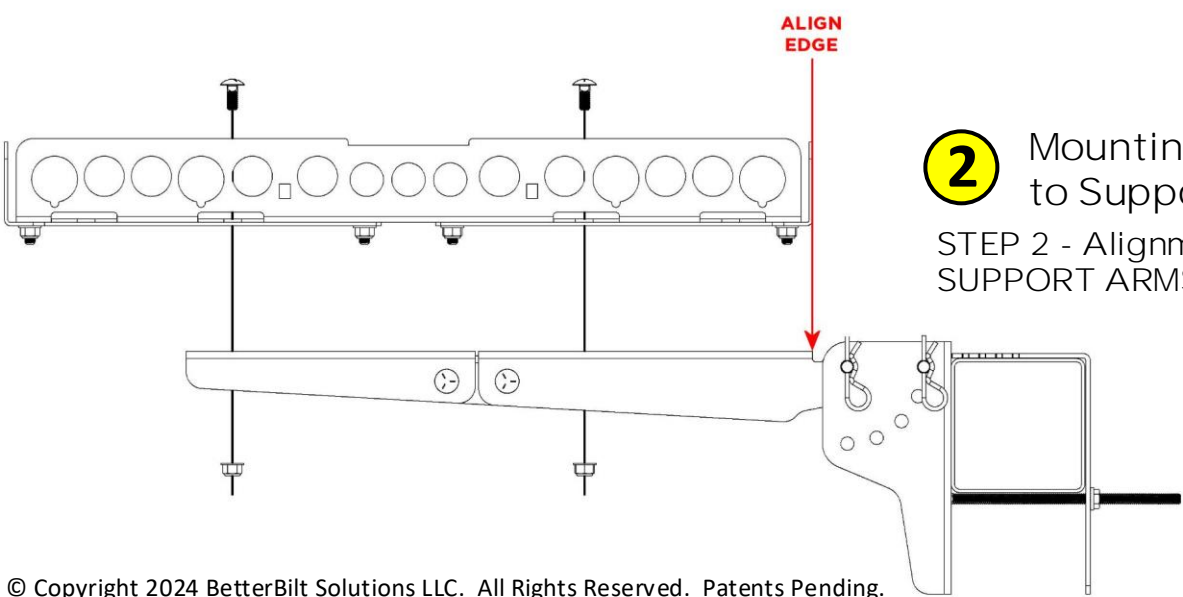

2 Mounting Tray Pan to Support Arms - Alignment

STEP 2 - Alignment: Note how TRAY PAN edge aligns with SUPPORT ARMS. This allows full range of Folding Action.


GENNYGO
GENERATOR & CARGO CARRIERS

Proudly Made in the USA

Haul It All!

MP
MOUNT-N-LOCK
INNOVATIVE
RV CARGO

F3KS2448 KIT
ASSEMBLY GUIDE

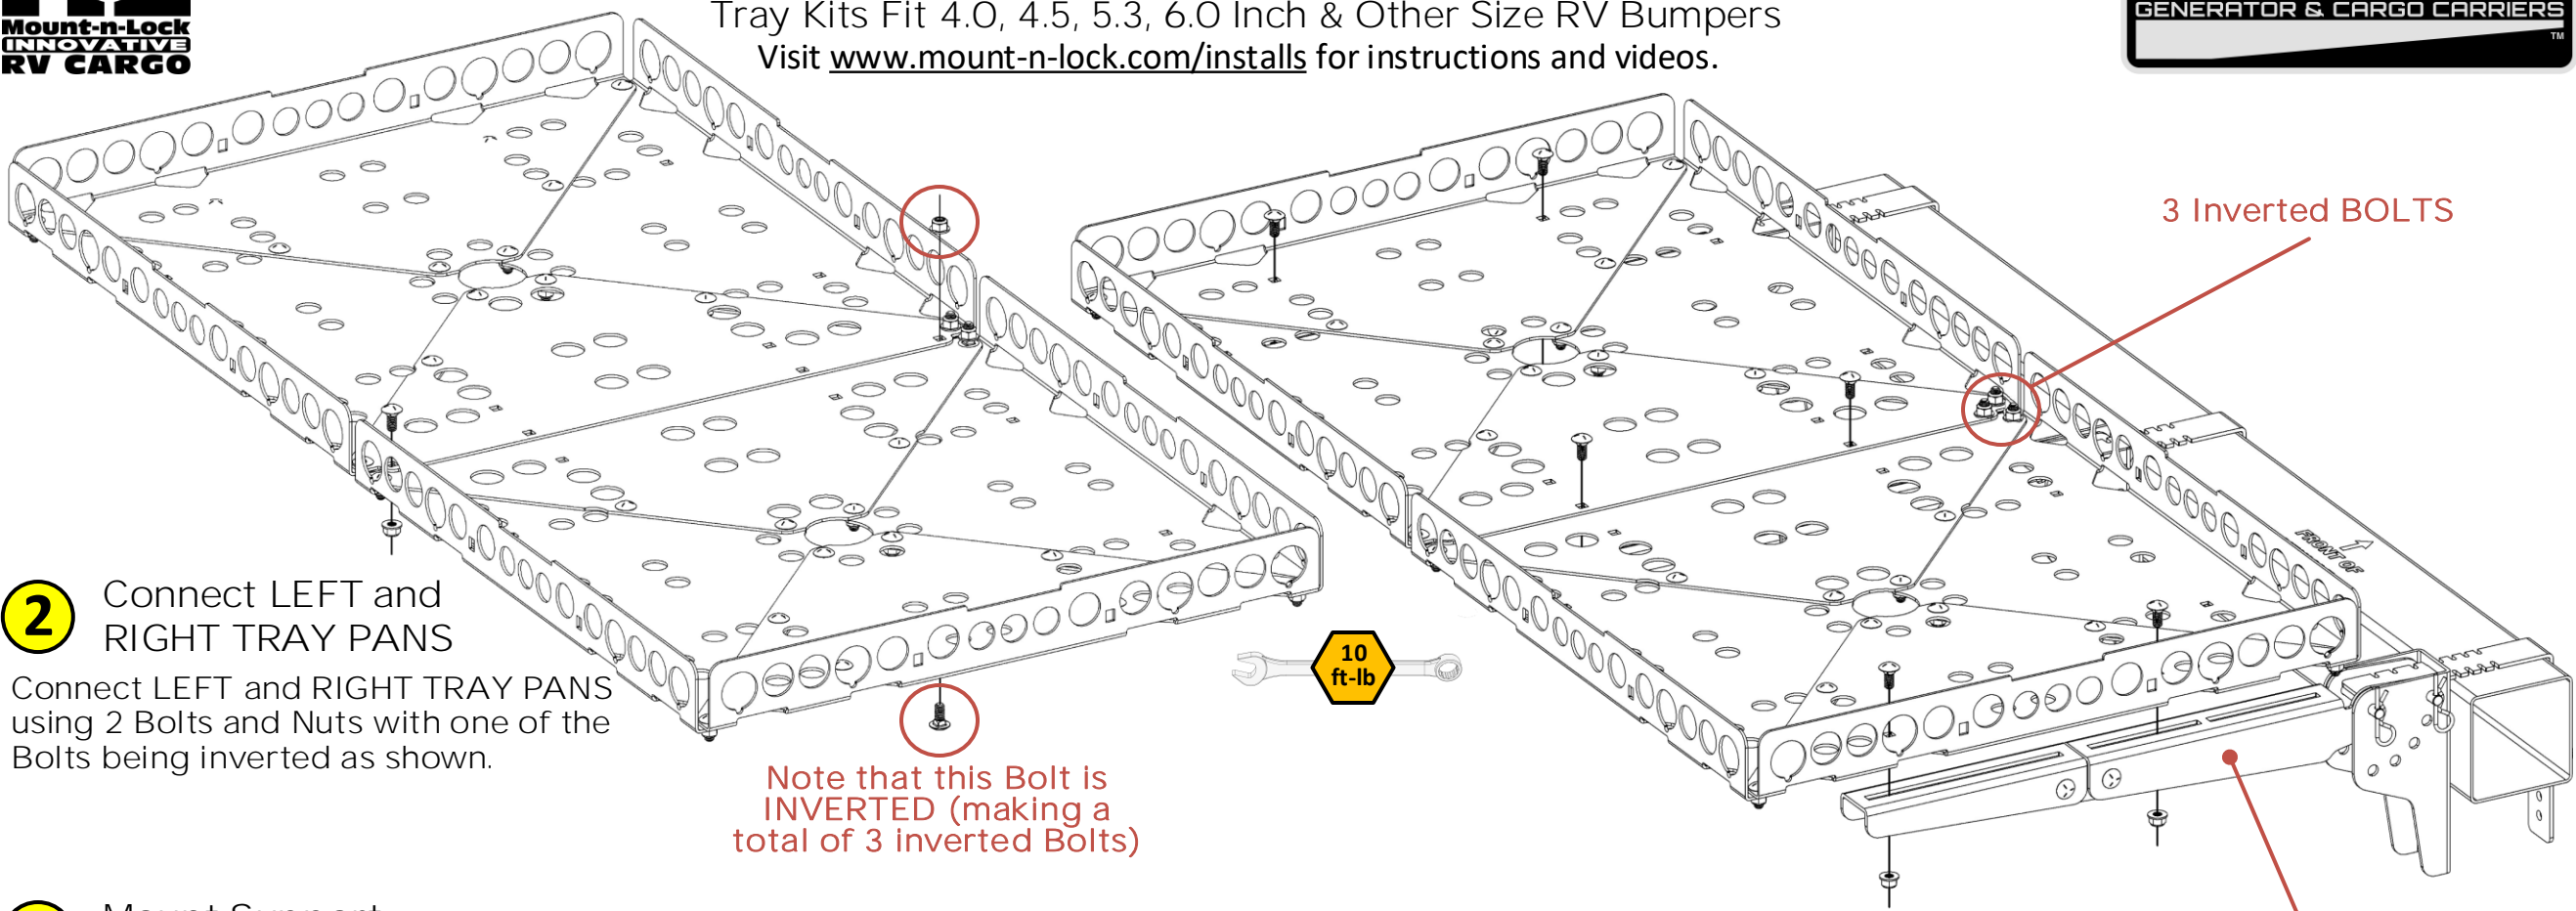


2 Connect LEFT and RIGHT TRAY PANS
Connect LEFT and RIGHT TRAY PANS using 2 Bolts and Nuts with one of the Bolts being inverted as shown.

Note that this Bolt is INVERTED (making a total of 3 inverted Bolts)

3 Inverted BOLTS

SUPPORT ARM (1 of 3)

3 Mount Support Arms to Bumper
Mount 3 SUPPORT ARMS to BUMPER as shown using separate FSAS Assembly Guide. Note spacing between SUPPORT ARMS.

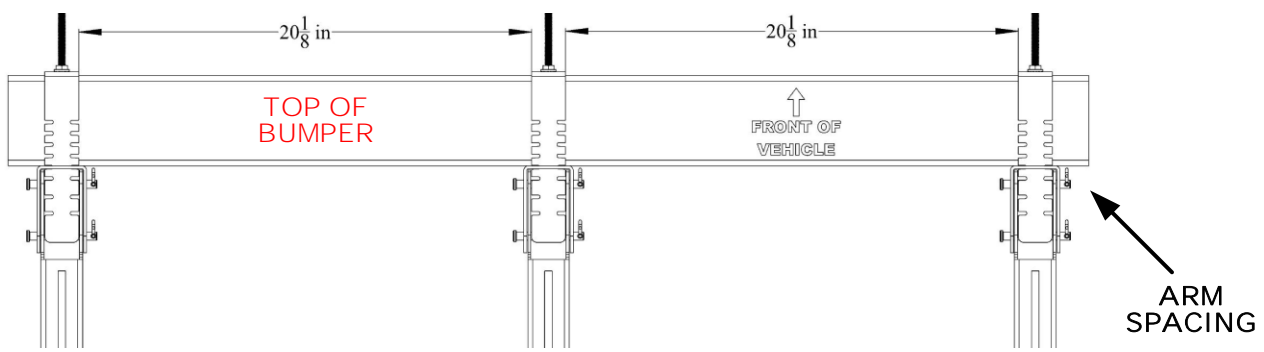

4 Mount Tray Pan Assembly to 3 Support Arms
Mount TRAY PAN ASSEMBLY to 3 SUPPORT ARMS using 6 BOLTS and NUTS as shown above. Note spacing between SUPPORT ARMS. Note that side with group of 3 Inverted BOLTS goes toward BUMPER.