



**1** Assemble Tray Pans

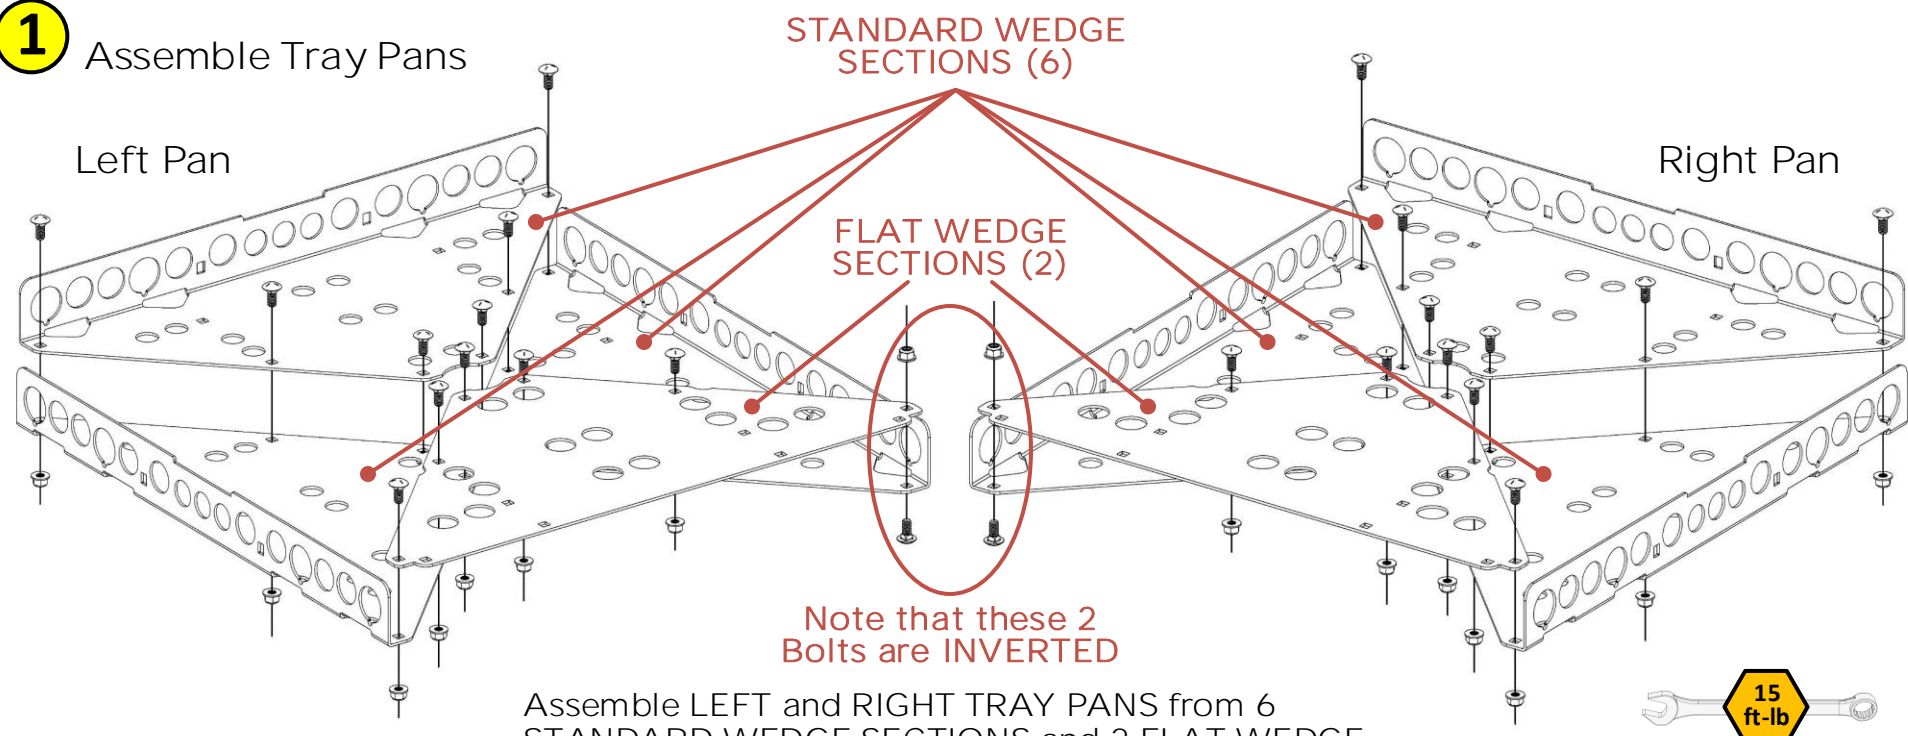

Assemble LEFT and RIGHT TRAY PANS from 6 STANDARD WEDGE SECTIONS and 2 FLAT WEDGE SECTIONS using 24 Nuts & Bolts as Shown.

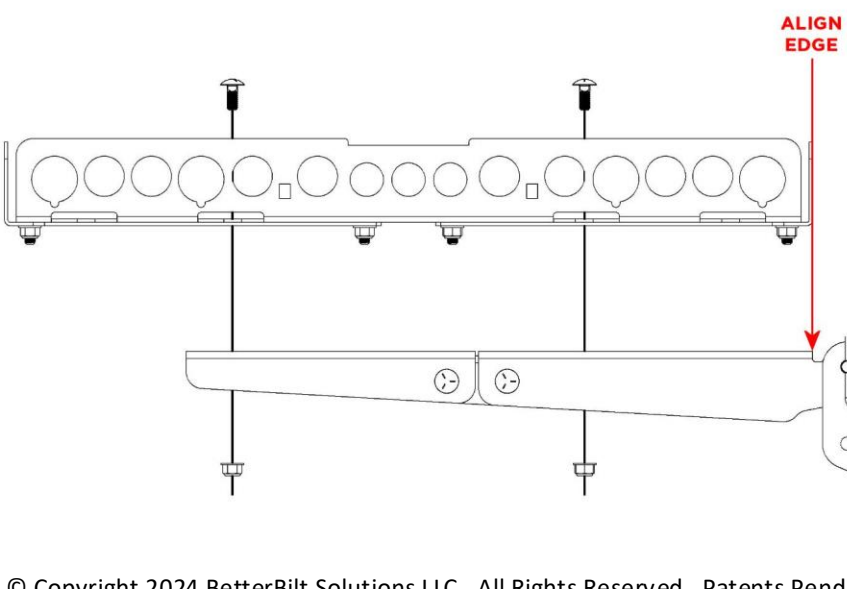


**2** Mounting Tray Pan to Support Arms - Alignment

STEP 2 - Alignment: Note how TRAY PAN edge aligns with SUPPORT ARMS. This allows full range of Folding Action.

**GENNYGO**  
GENERATOR & CARGO CARRIERS

**MP**  
Mount-n-Lock  
INNOVATIVE  
RV CARGO

F3KS2448 KIT  
ASSEMBLY GUIDE

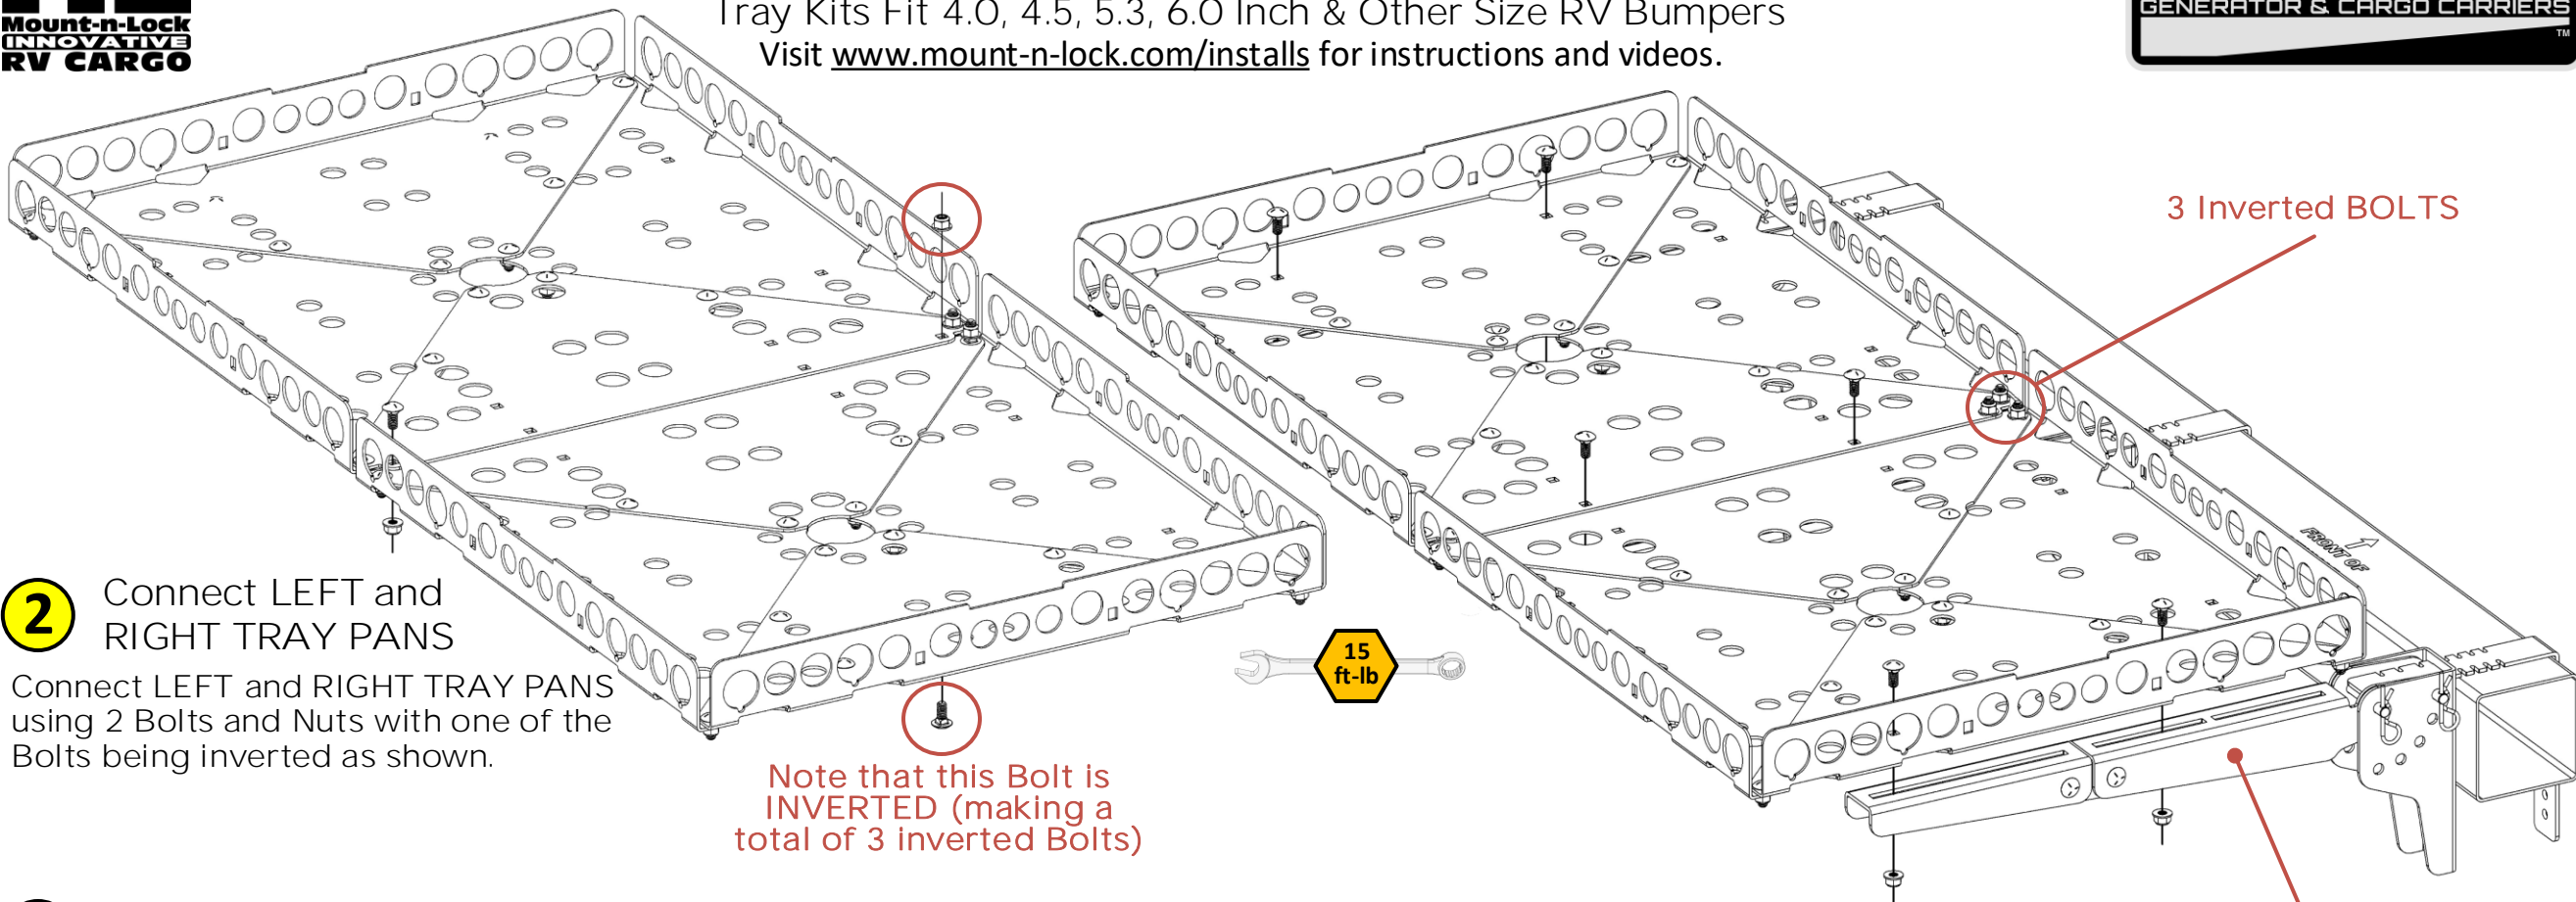

**2** Connect LEFT and RIGHT TRAY PANS  
Connect LEFT and RIGHT TRAY PANS using 2 Bolts and Nuts with one of the Bolts being inverted as shown.


Note that this Bolt is INVERTED (making a total of 3 inverted Bolts)

3 Inverted BOLTS

15 ft-lb

SUPPORT ARM (1 of 3)

**3** Mount Support Arms to Bumper  
Mount 3 SUPPORT ARMS to BUMPER as shown using separate FSAS Assembly Guide. Note spacing between SUPPORT ARMS.

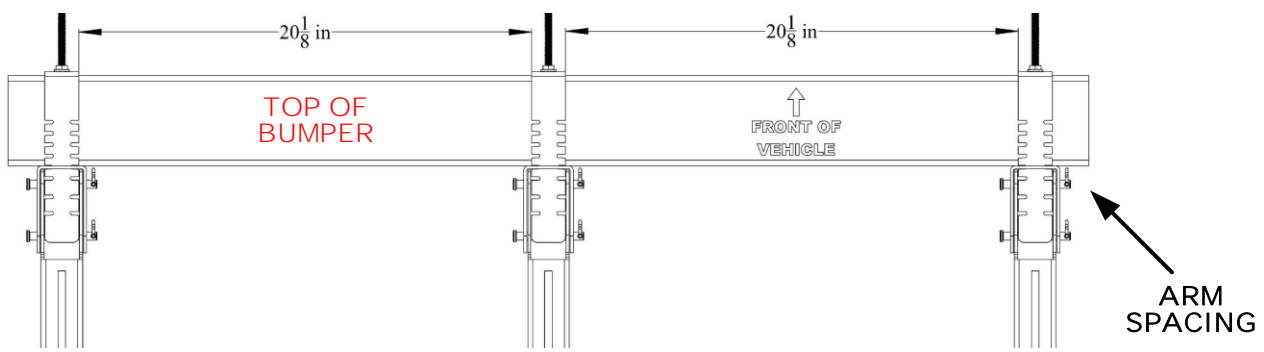

**4** Mount Tray Pan Assembly to 3 Support Arms  
Mount TRAY PAN ASSEMBLY to 3 SUPPORT ARMS using 6 BOLTS and NUTS as shown above. Note spacing between SUPPORT ARMS. Note that side with group of 3 Inverted BOLTS goes toward BUMPER.