




Mount-n-Lock™ GennyGo™ RevX2 Tray Support Arms
Tray Supports Fit 4.0, 4.5, 5.3, 6.0 Inch & Other RV Bumpers
Visit www.mount-n-lock.com/installs for full-size instructions and videos.

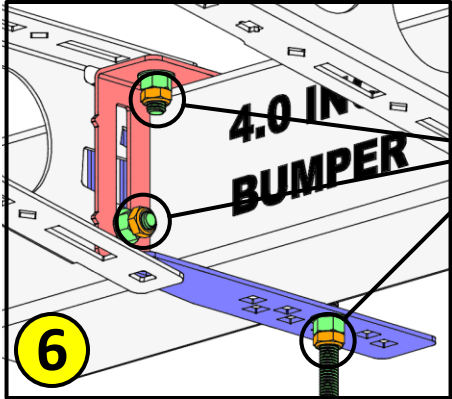

JAM NUTS



STEP 6 (Last Step): Add JAM NUTS to All 6 Bolts, Tighten to 10 ft-lb.

LONG RETENTION BOLTS

BUMPER DEPTH HOLE CHART

- 6.0 inch → 1
- 5.3 inch → 2
- 4.5 inch → 3
- 4.0 inch → 4
- 3.5 inch → 5
- 3.0 inch → 6
- 2.5 inch → 7
- 2.0 inch → 8


4.0 inch Holes

4.0 INCH BUMPER

FLANGE LOCK NUTS



STEP 4: Clamp the BRACKETS Snugly to the BUMPER then Tighten 4 FLANGE LOCK NUTS to 25 ft-lb.

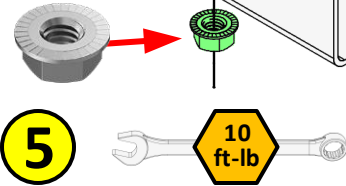

STEP 5: Insert 2 LONG RETENTION BOLTS into Designated Holes, Thread FLANGE LOCK NUT onto Each Bolt, Tighten to 10 ft-lb.





Proudly Made in the USA
Haul It All!

GSAA/GSAS
Support Arms




SUPPORT ARMS
ASSEMBLY GUIDE

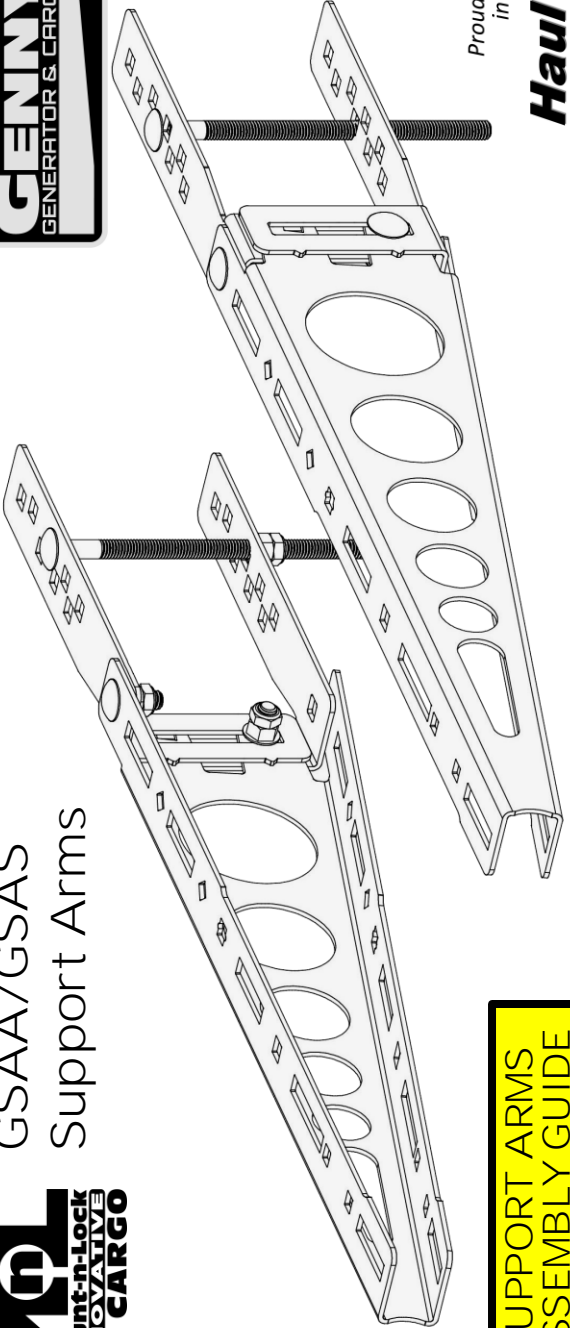


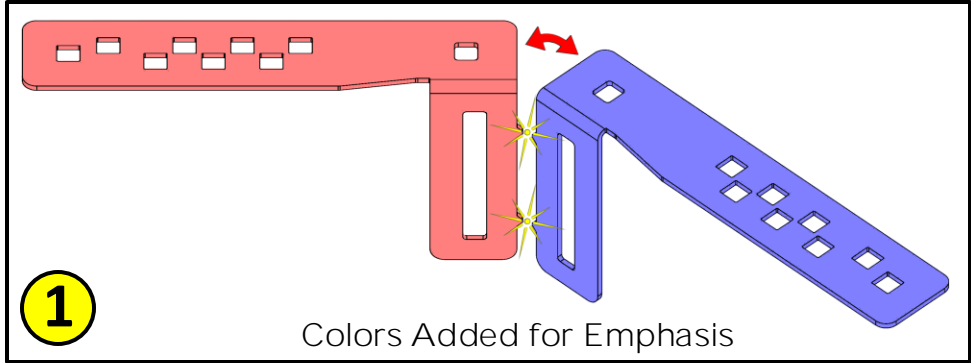

STEP 1: Separate UPPER and LOWER BRACKETS by Working Pieces Back and Forth as Shown. **NOTE:** Either Bracket can be UPPER or LOWER BRACKET Depending on Orientation of SUPPORT ARM.

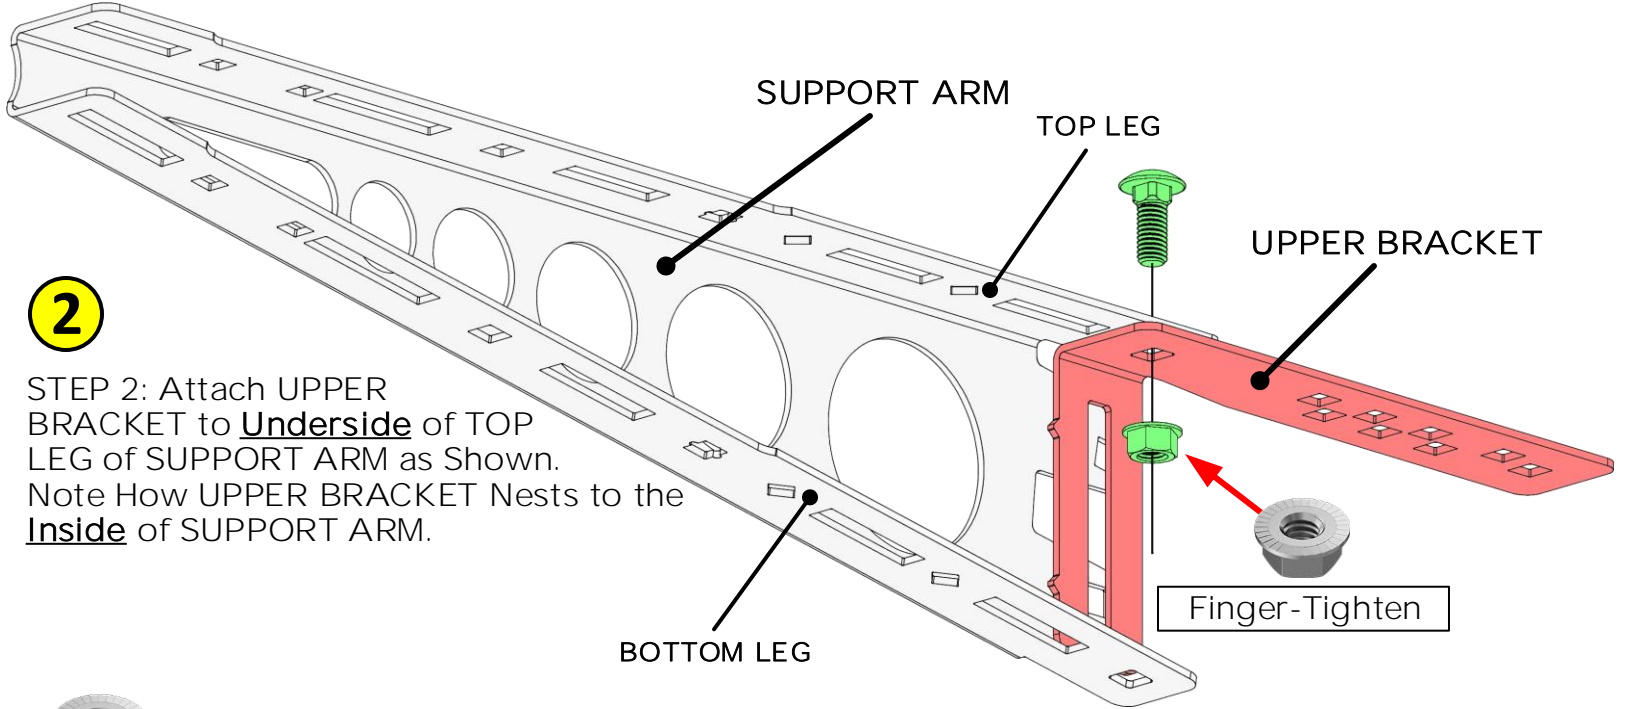

STEP 2: Attach UPPER BRACKET to Underside of TOP LEG of SUPPORT ARM as Shown. Note How UPPER BRACKET Nests to the Inside of SUPPORT ARM.

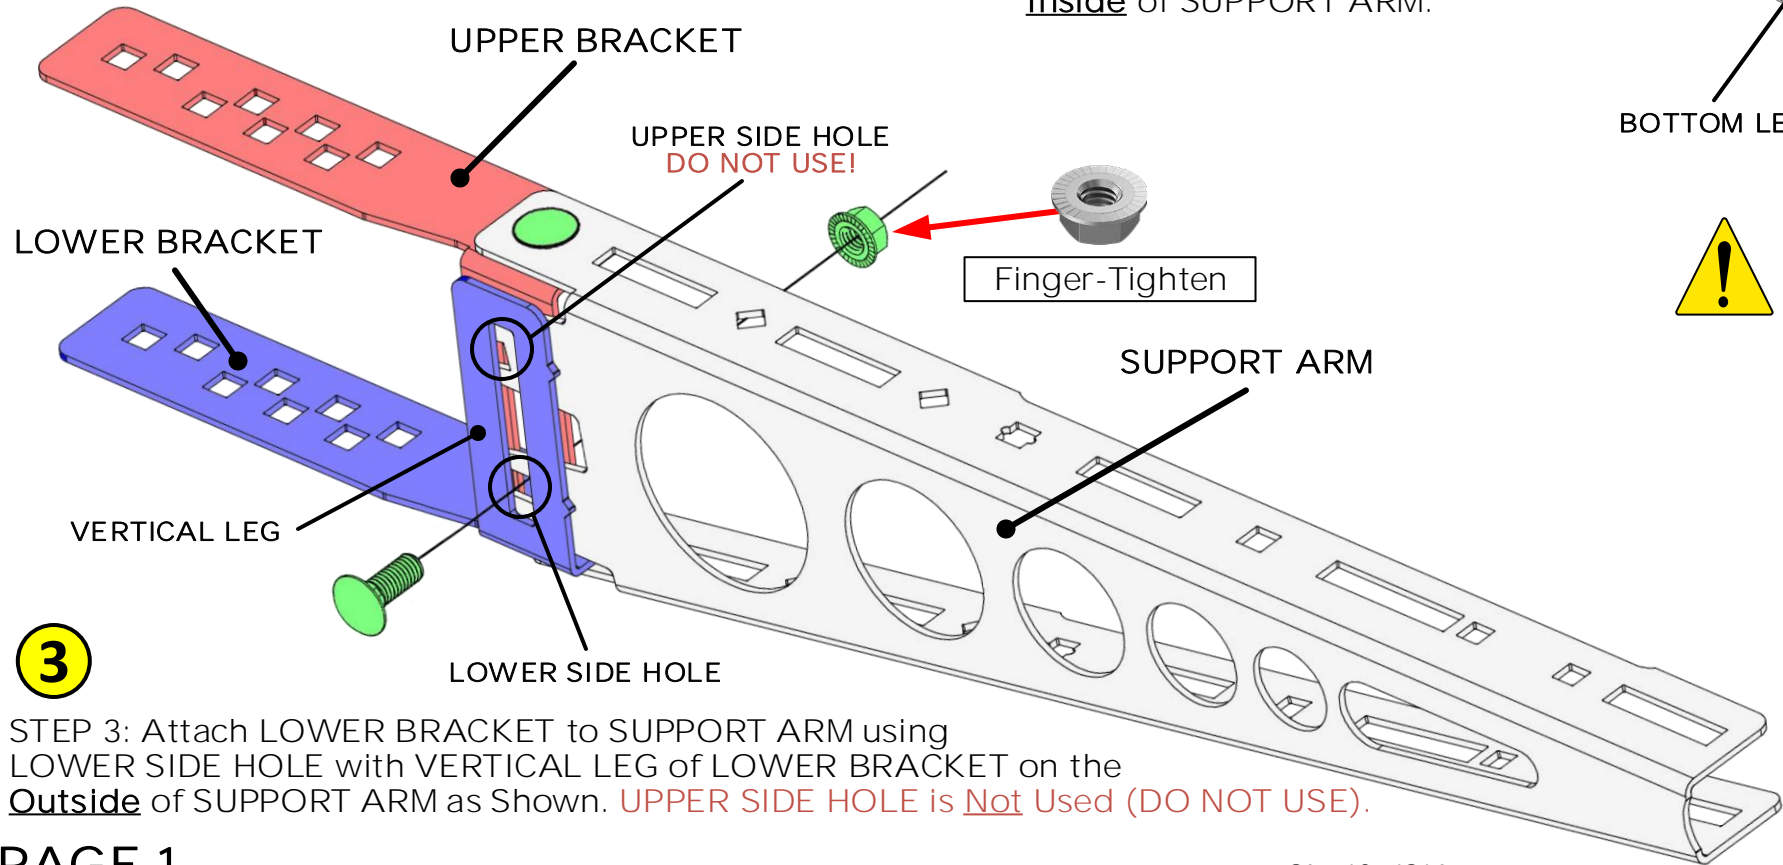

STEP 3: Attach LOWER BRACKET to SUPPORT ARM using LOWER SIDE HOLE with VERTICAL LEG of LOWER BRACKET on the Outside of SUPPORT ARM as Shown. **UPPER SIDE HOLE is Not Used (DO NOT USE).**

