




Mount-n-Lock™ GennyGo™ RevX2 Tray Pans/Tray Kits
Tray Kits Fit 4.0, 4.5, 5.3, 6.0 Inch & Other Size RV Bumpers
Visit www.mount-n-lock.com/installs for full-size instructions and videos.



1

Assemble Tray Pan

STEP 1: Assemble TRAY PAN from 4 WEDGE SECTIONS using 8 Nuts & Bolts as Shown. Note How Opposing WEDGE SECTIONS (in Blue) Sit On Top of the Other Set of Opposing WEDGE SECTIONS (In Red).

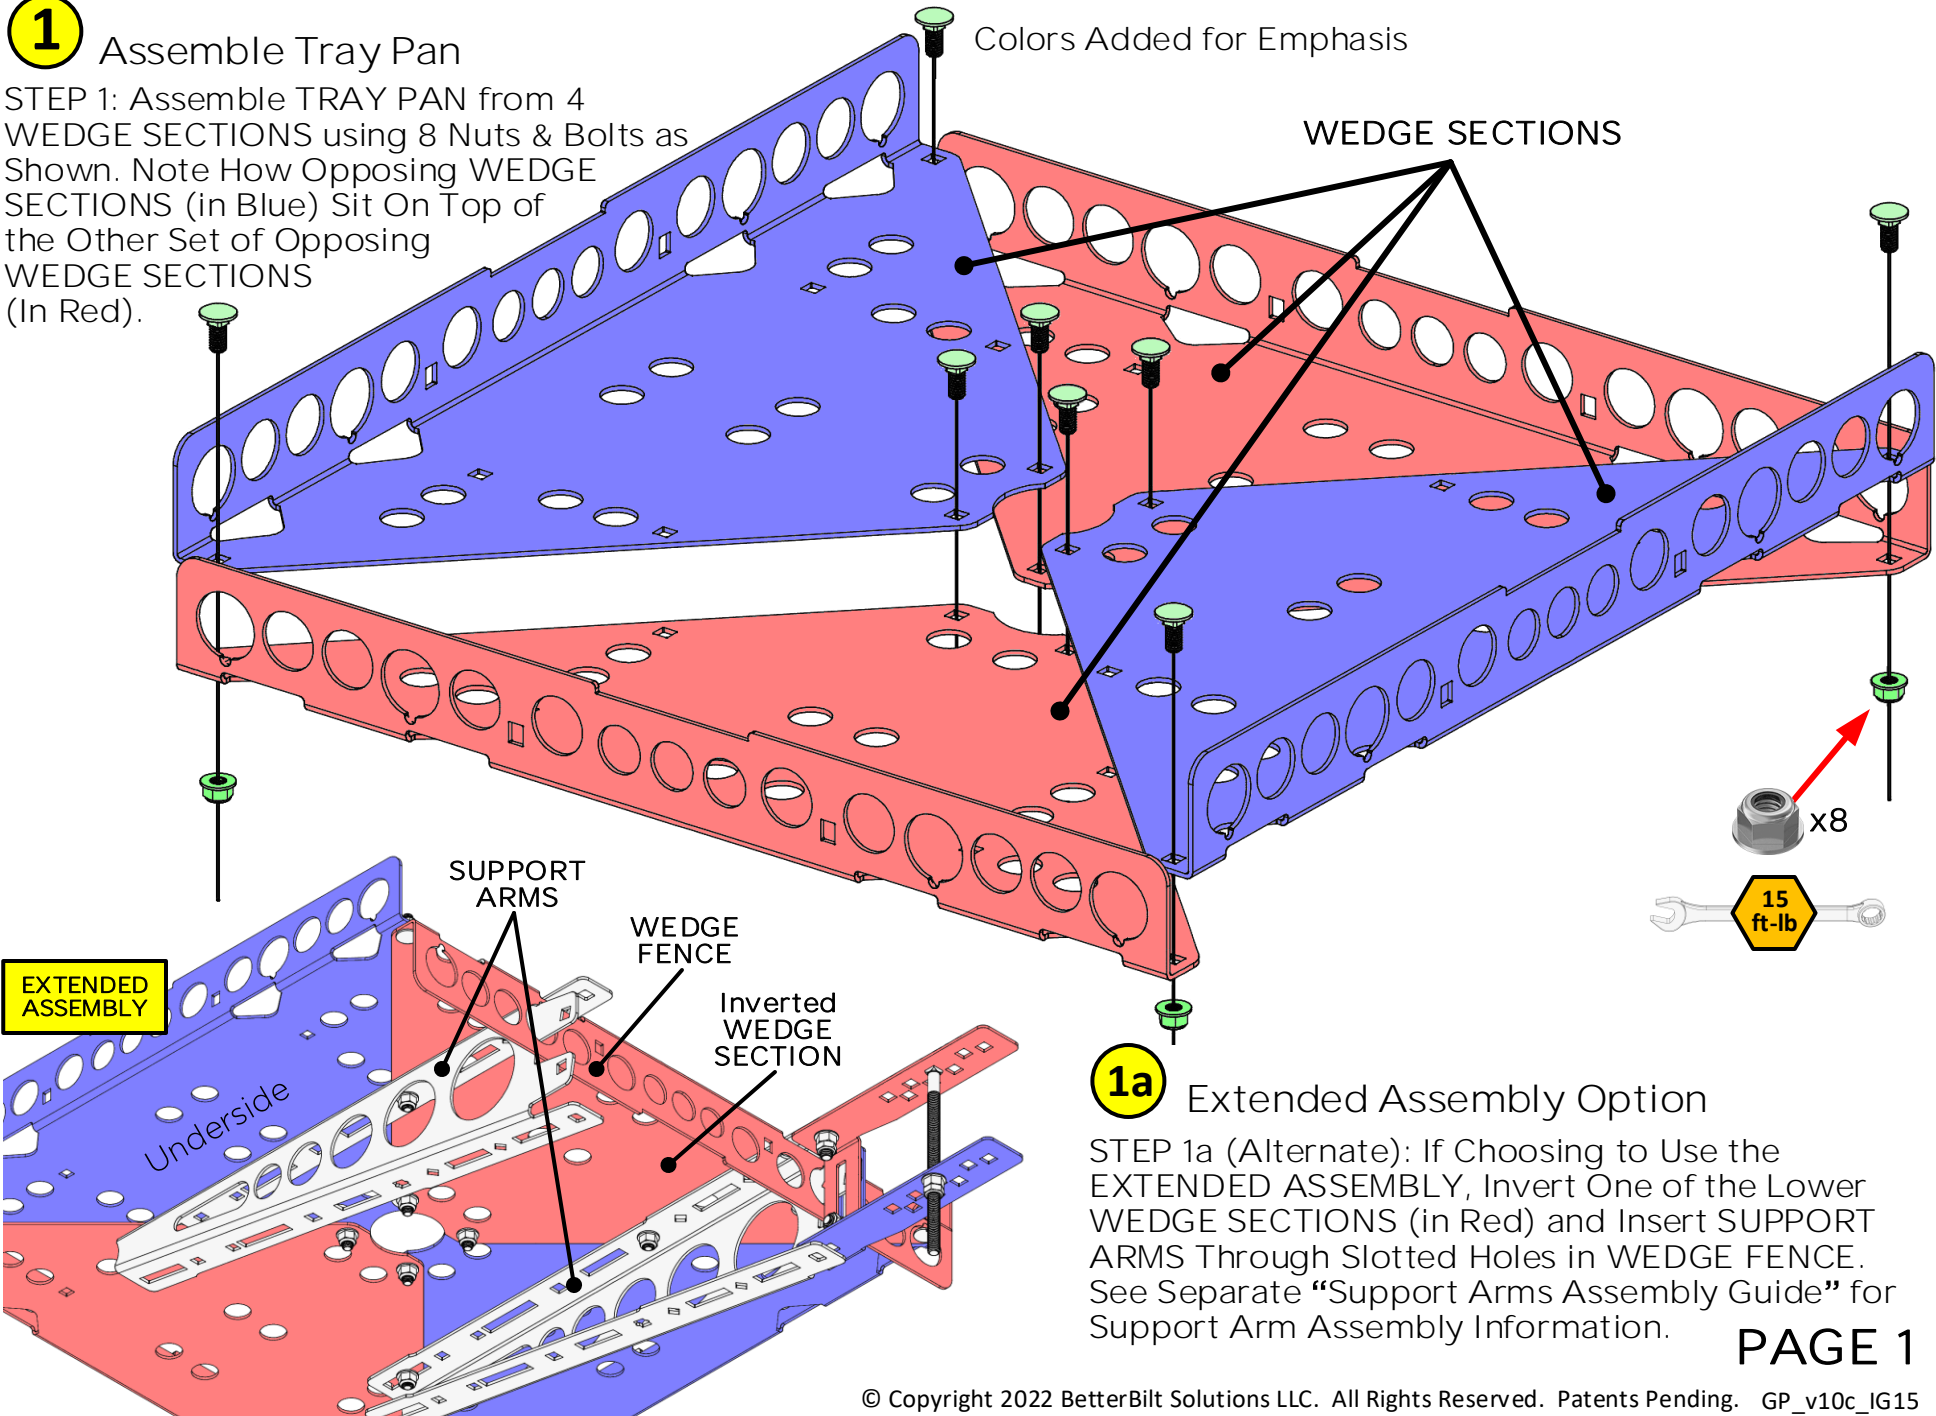


1a

Extended Assembly Option

STEP 1a (Alternate): If Choosing to Use the EXTENDED ASSEMBLY, Invert One of the Lower WEDGE SECTIONS (in Red) and Insert SUPPORT ARMS Through Slotted Holes in WEDGE FENCE. See Separate “Support Arms Assembly Guide” for Support Arm Assembly Information.

PAGE 1

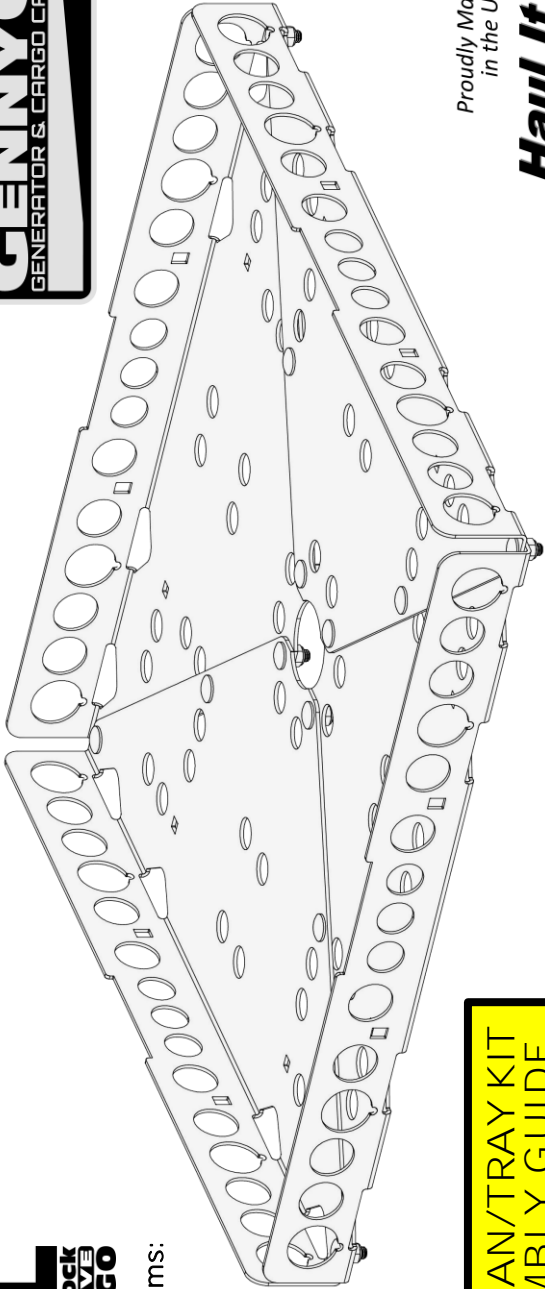

Proudly Made in the USA
Haul It All!




Use For Items:
GGPA
GGPS
GGKA
GGKH
GGKS
GHKA
GHKH
GHKS

TRAY PAN/TRAY KIT
ASSEMBLY GUIDE




Colors Added for Emphasis

Mount-n-Lock™ GennyGo™ RevX2 Tray Pans/Tray Kits
Tray Kits Fit 4.0, 4.5, 5.3, 6.0 Inch & Other Size RV Bumpers
Visit www.mount-n-lock.com/installs for full-size instructions and videos.

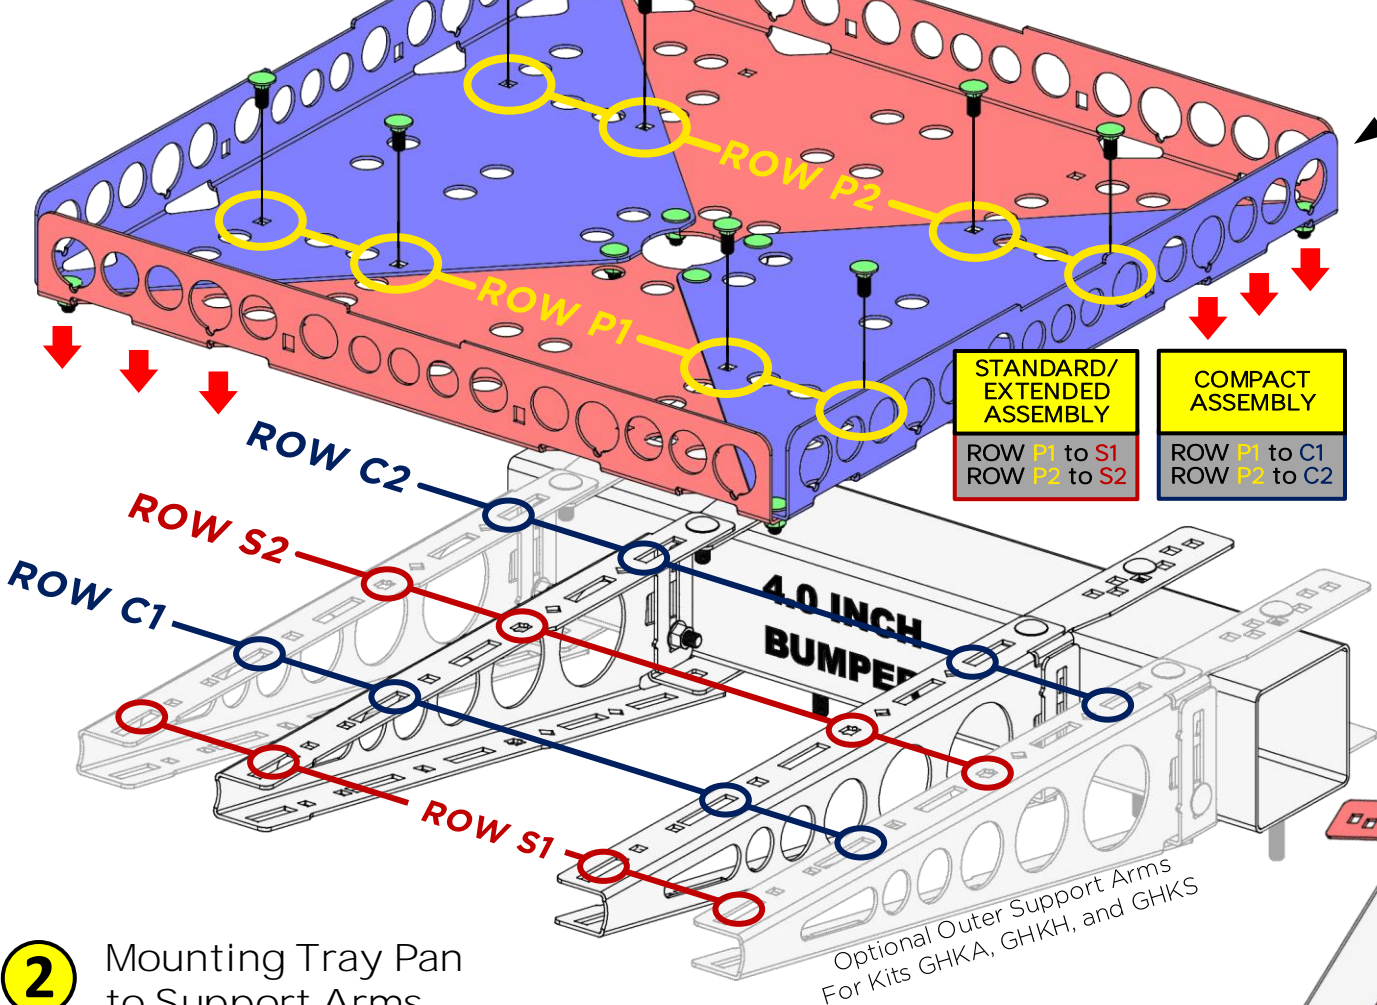

2 Mounting Tray Pan to Support Arms

STEP 2: After Assembling and Mounting the SUPPORT ARMS to Your BUMPER as Shown in Separate “Support Arms Assembly Guide” Document, You Will Mate the TRAY PAN From Step 1 to the SUPPORT ARMS using either 4 Nuts & Bolts (Inner Grouping for Kits GGKA, GGKH, or GGKS) or 8 Nuts & Bolts (for Kits GHKA, GHKH, or GHKS). If Using the COMPACT ASSEMBLY (Which Moves the TRAY PAN over the BUMPER), Mate TRAY PAN to SUPPORT ARMS Using Holes in ROWS C1 & C2; For STANDARD or EXTENDED ASSEMBLY, Use ROWS S1 & S2.

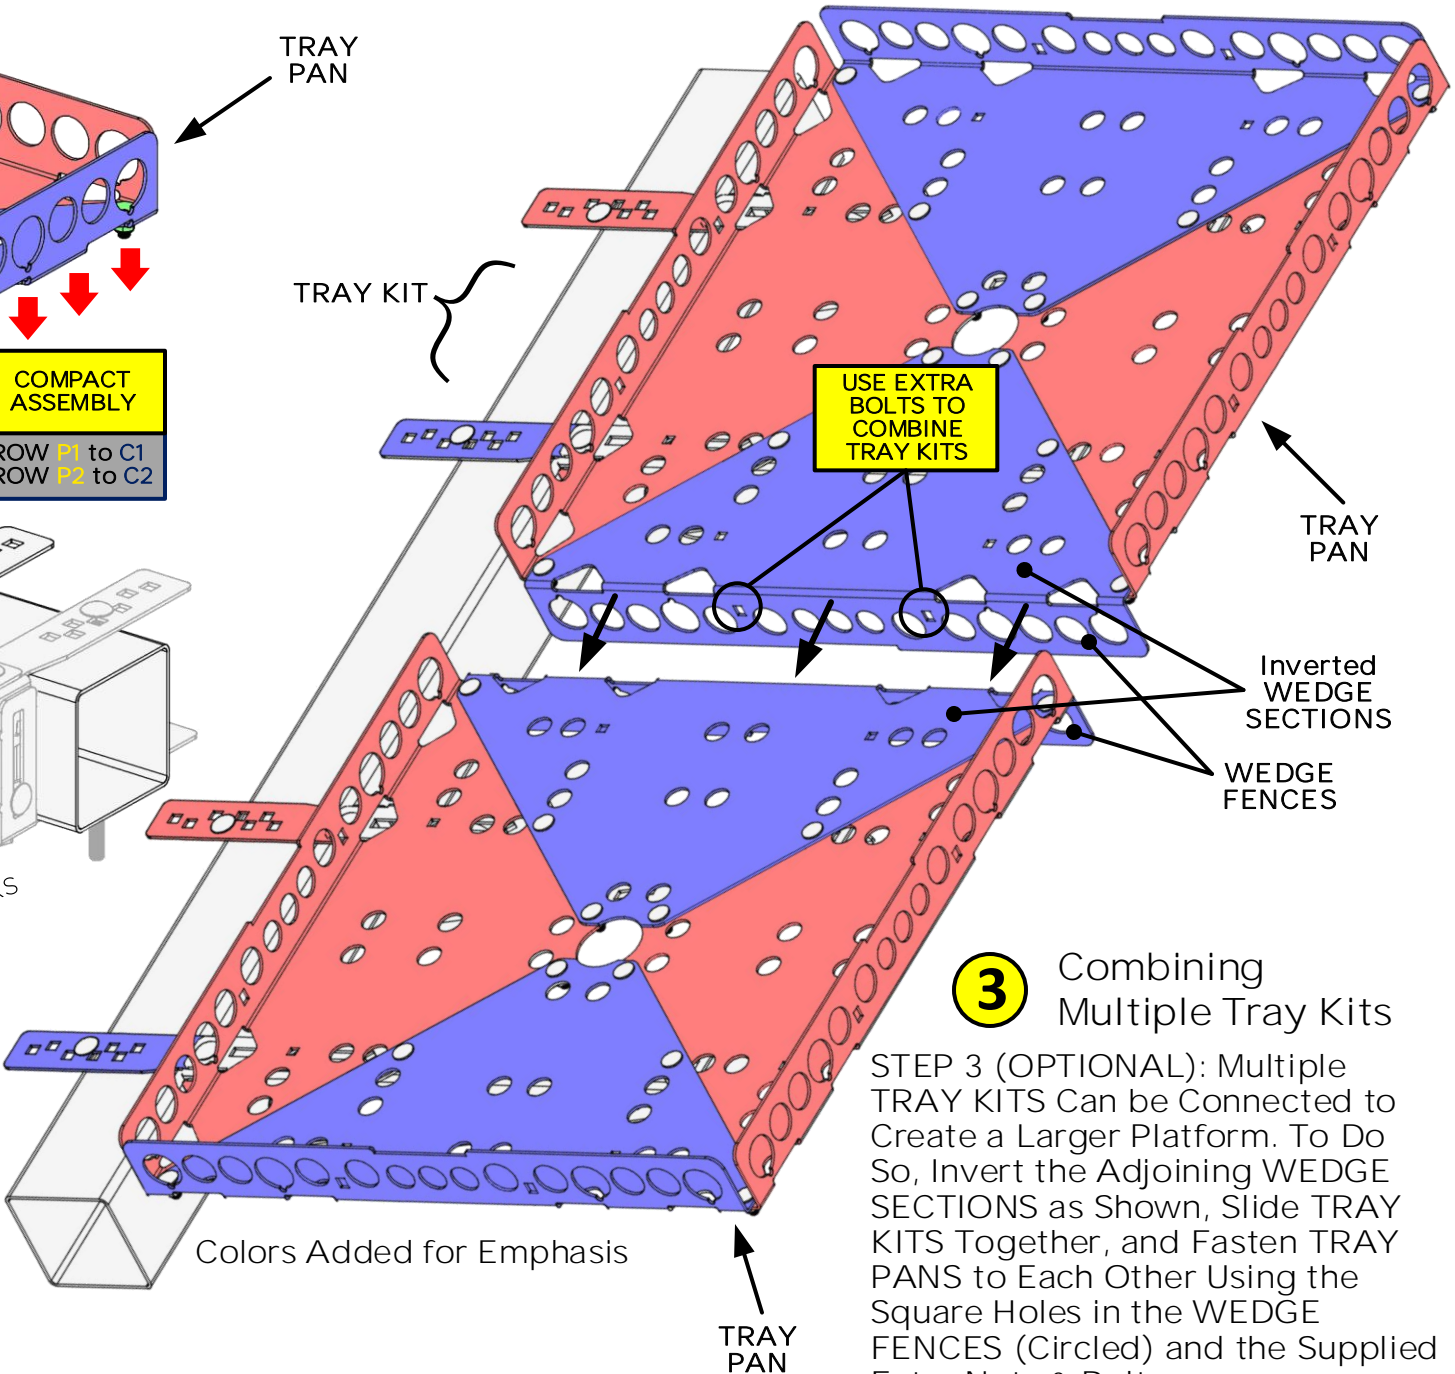

3 Combining Multiple Tray Kits

STEP 3 (OPTIONAL): Multiple TRAY KITS Can be Connected to Create a Larger Platform. To Do So, Invert the Adjoining WEDGE SECTIONS as Shown, Slide TRAY KITS Together, and Fasten TRAY PANS to Each Other Using the Square Holes in the WEDGE FENCES (Circled) and the Supplied Extra Nuts & Bolts.