



# Mount-n-Lock® ShakeStopper® Assembly Pictorial

## For H4HZD Model Clamping Hitch

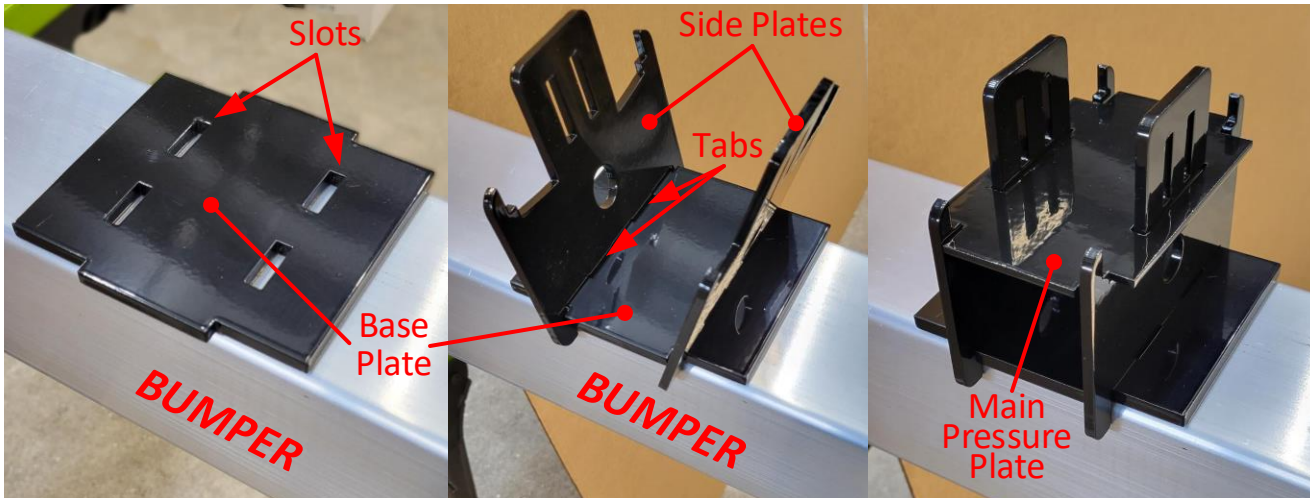

1. Set Base Plate on top of Bumper as shown.  
2. Insert Tabs on Side Plates into Slots on Base Plate

3a. Set Main Pressure Plate atop Side Plates as shown.

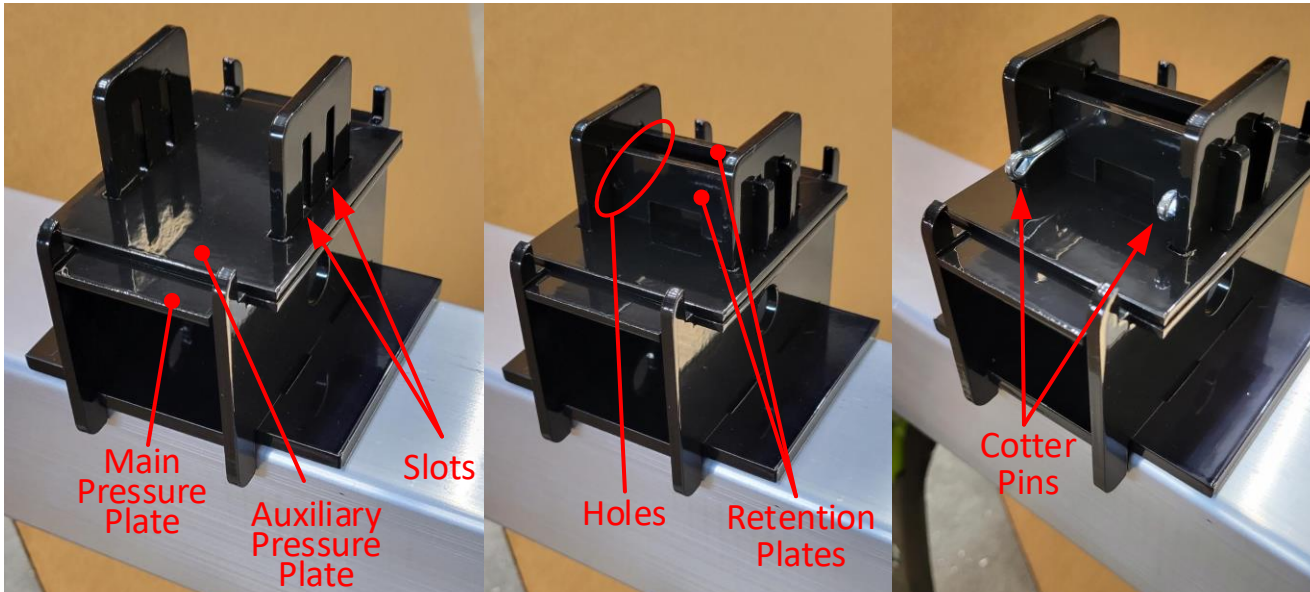

3b. Set Auxiliary Pressure Plate atop Main Pressure Plate. Note location of 4 Slots used in next step.

4a. Slide 2 Retention Plates through slots in Side Plates with large center notch toward Pressure Plate.  
4b. Insert the 2 Cotter Pins into holes in plates; bend pin legs to hold in place.




# H4HZD

## ASSEMBLY GUIDE


Visit [www.mount-n-lock.com/installs](http://www.mount-n-lock.com/installs) for full-size instructions.

© Copyright 2024 BetterBilt Solutions LLC. All Rights Reserved.



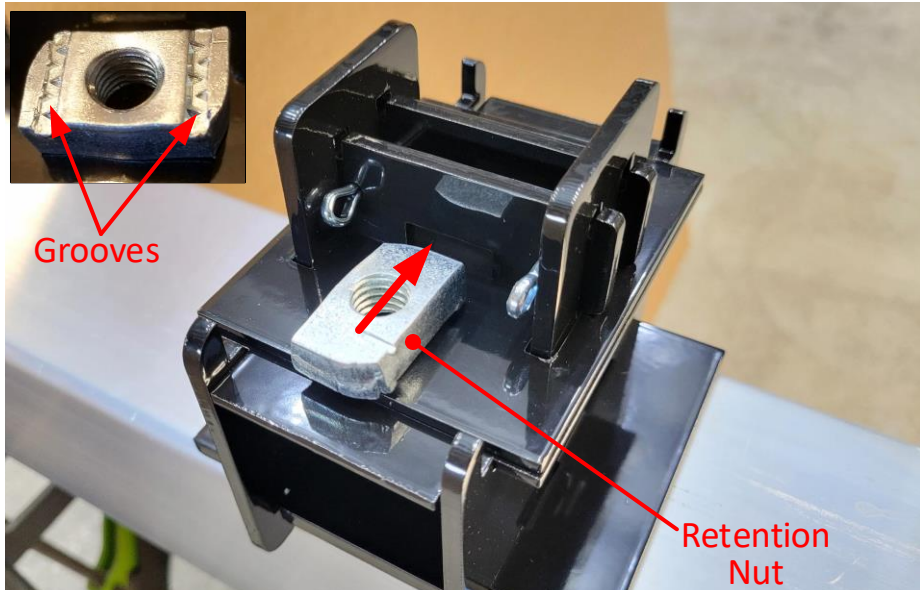


5. Slide Retention Nut through openings in Retention Plates. Center nut between plates (Note: Grooves in nut go against Pressure Plate).

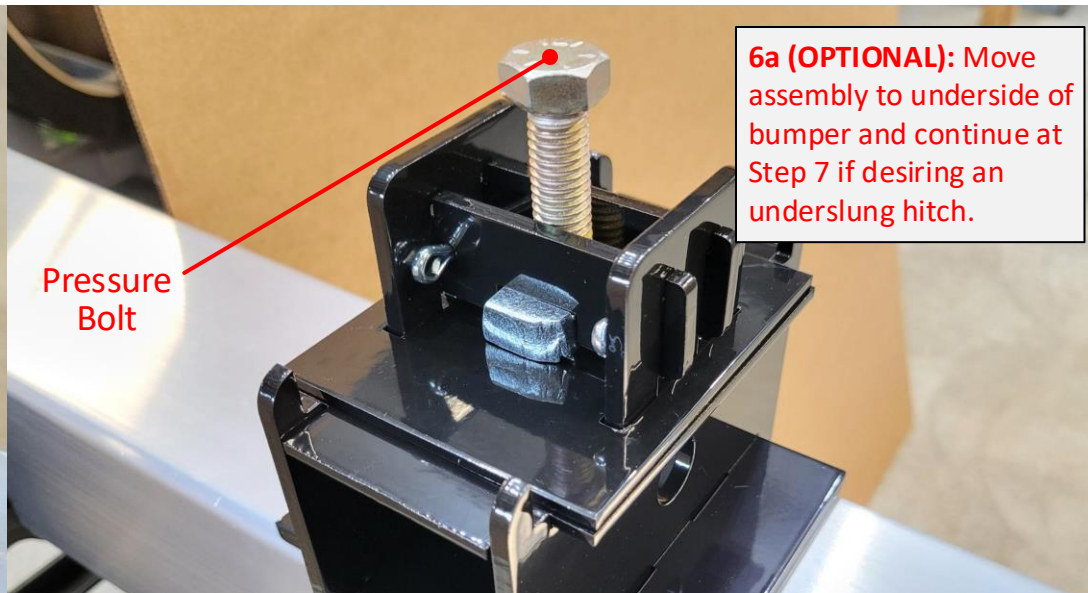


**6a (OPTIONAL):** Move assembly to underside of bumper and continue at Step 7 if desiring an underslung hitch.

6. Thread Pressure Bolt into Retention Nut until nut lifts Retention Plates and tip of bolt rests lightly against Pressure Plate. **DO NOT DEFORM PRESSURE PLATE!**

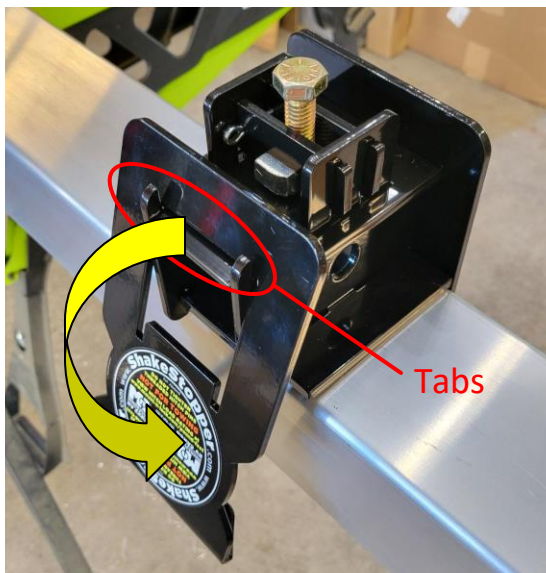

7. Add front and rear Face Plates. Hook Face Plates over Tabs on Side Plates and swing into place.

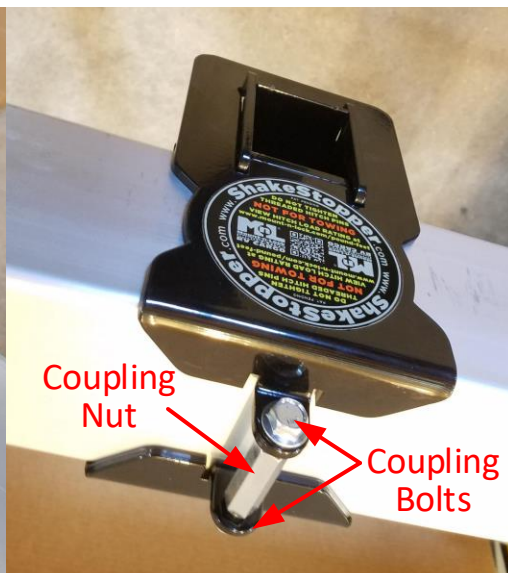

8. Connect Face Plates using Coupling Nut and Bolts. Finger tighten only. *Seeing exposed bolt threads is okay.*



9. Insert Accessory into Hitch, tighten Pressure Bolt until no movement, then torque Carriage Bolt Locknut to firmly clamp Hitch to Bumper. Loosen Pressure Bolt to remove accessory. **Hitch is now ready to use!**

**! PROPER USE**

1. Hitch Pin Required.
2. Do Not Tighten Threaded Hitch Pins or Use Any Other Anti-Rattle Devices.
3. Pressure Bolt Torque: 20 lb-ft *per Pressure Plate*.
4. Do Not Overload. Visit [mount-n-lock.com/pound-feet](http://mount-n-lock.com/pound-feet) for Maximum Rated Capacity.

Visit [www.mount-n-lock.com/installs](http://www.mount-n-lock.com/installs) for full-size instructions.